

CRYSTAL GLASS



G2100



G2500



G1018



G0018



G2300



G1500



G1250



G2200




G0200-2




G0200-1

CRYSTAL GLASS


G2500

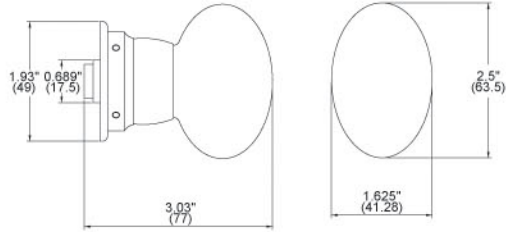


G1018

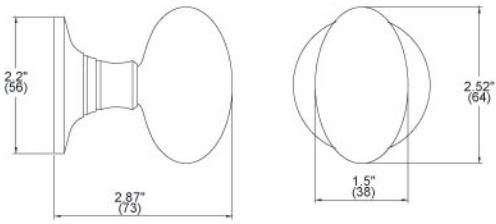


G1250

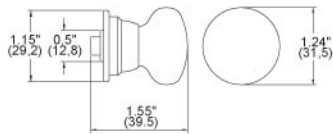


G2100

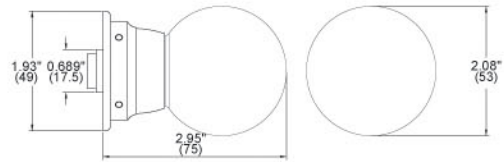


G1500

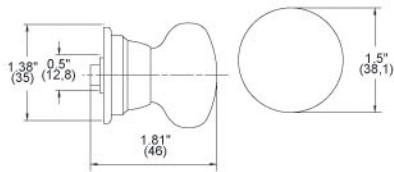


G2300

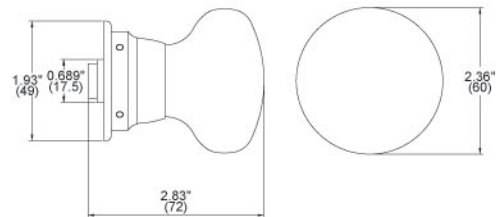


G1018

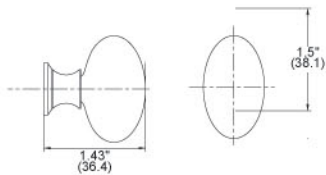


G2200

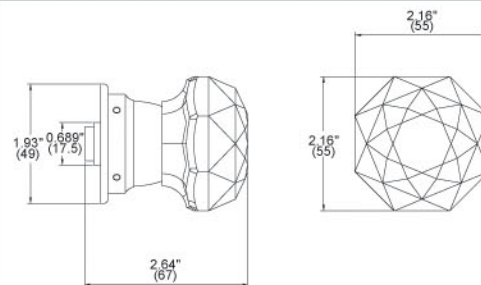

G0200-1

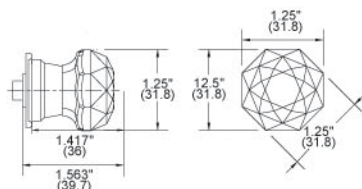

G0200-2

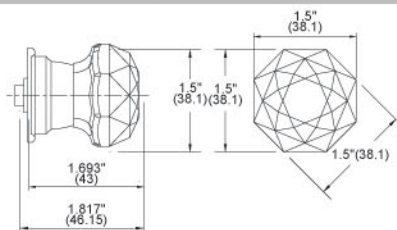

CUSTOM KNOBS



B2300



AD1440



BG1479



BG1441



NB1443



NB1442




LE1463




NB1476

CUSTOM KNOBS


B2300

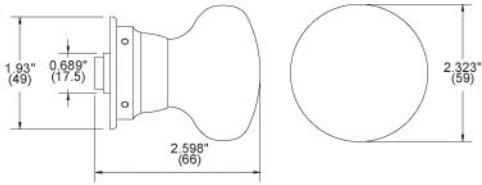


AD1440

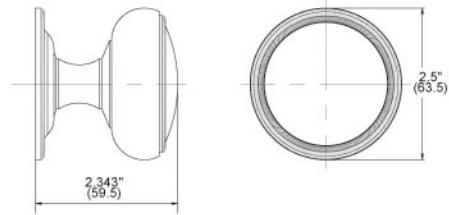


BG1479

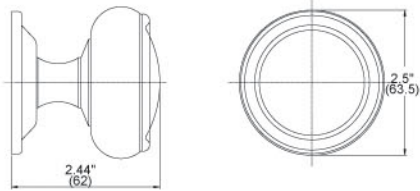


BG1441

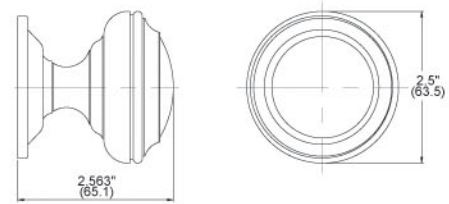


NB1443

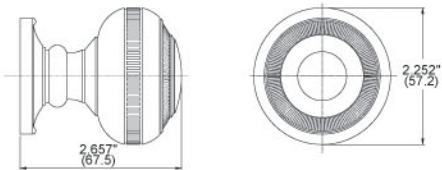


NB1442

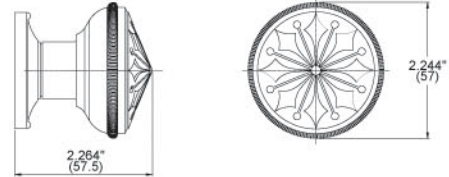

LE1463

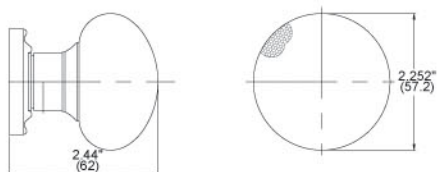

NB1476

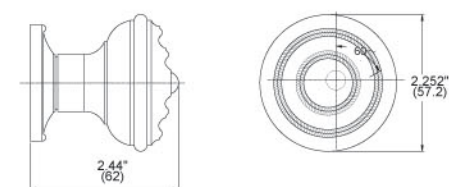

CUSTOM LEVER SETS & ACCESSORIES



AT1431



AT1430B



AE1430D



FS1500



FS1505



G0018



DE1500



DE1505



TT1505



TT1510



B1500



B1250



G1500



G1250



G0200-2



G0200-1




0976-2




0976-1

CUSTOM LEVER & ACCESSORIES


AT1431

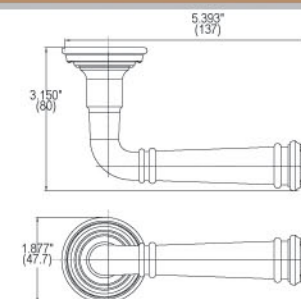


AT1430B

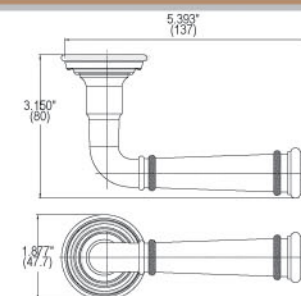


AE1430D

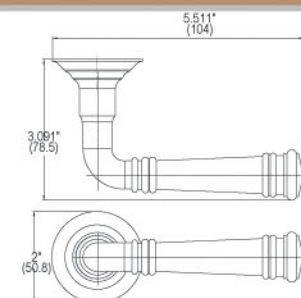

FS-1500

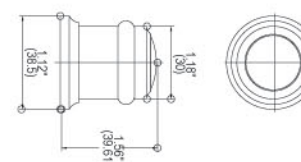


FS-1505

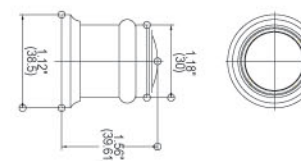


CUSTOM LEVER SETS & ACCESSORIES


DE1500

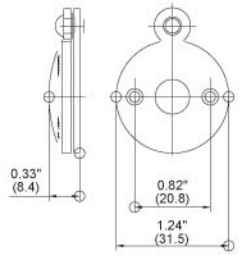


DE1505

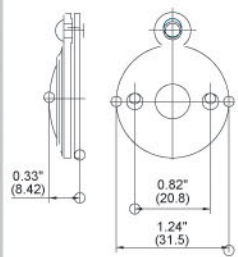


B1250

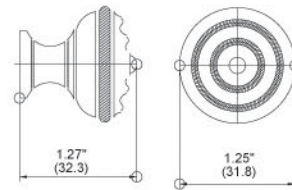


B1500

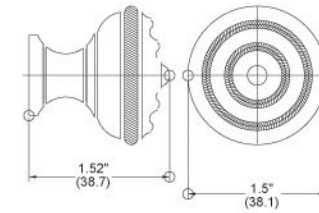


G0018

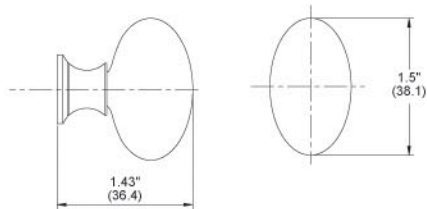


G1250

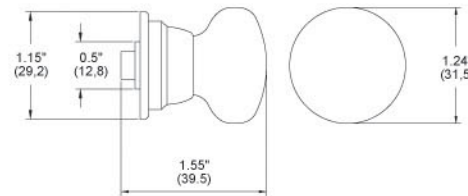


G1500

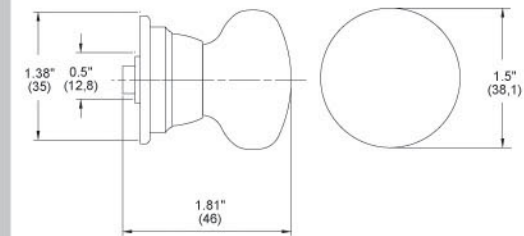


TT-1505

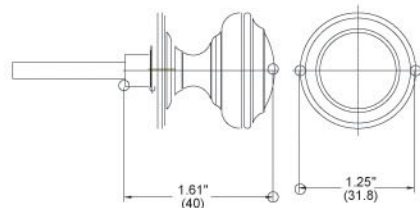


G0200-1

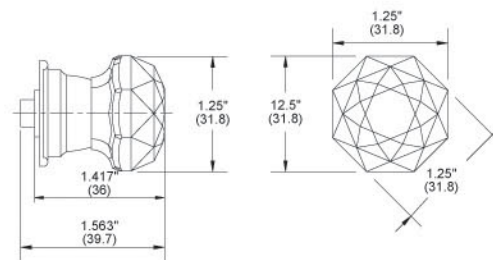


G0200-2

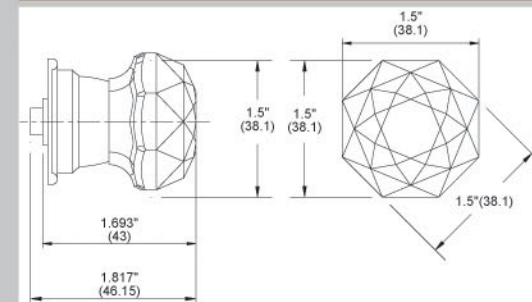

TT-1510

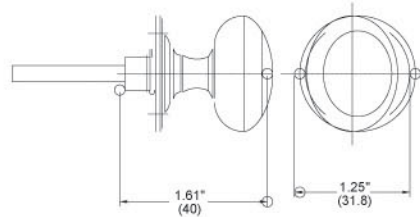

0976-1

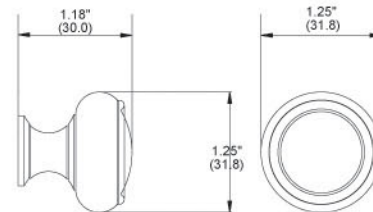

0976-2

